



Live View

The channel group liveview operation. Here you can record, snapshot and realize PTZ operation.



Playback

Search and playback remote video files of the channel group, and export operation.



Event

Real-time display device upload alarm information.



Video Wall

Video wall task setup and management, as well as display video real-time on the wall.



People Counting

Count in/out people of each channel, collect and compare people flow in different channels.



Log

Log search. It is to search client log and device log.



Event Config

Device corresponding alarm setup. It includes alarm arm/disarm, alarm trigger and etc.



Devices

Add, delete, modify device.



Device CFG

Configure the devices and channels.



PC-NVR

Set remote device. Support HDD management and set record plan manually.



Tour & Task

Set tour task.



User

Add, delete, modify SmartPSS users, roles, set user authorities and role authorities.



Heat Map

Statistics Channel The cumulative density of objects moving in a fixed scene.


Click on here to go into Live view

Click on here to go into playback

Click on the Smart PSS icon which will be on your desktop and this page will load

Organizations

Input Search Criteria

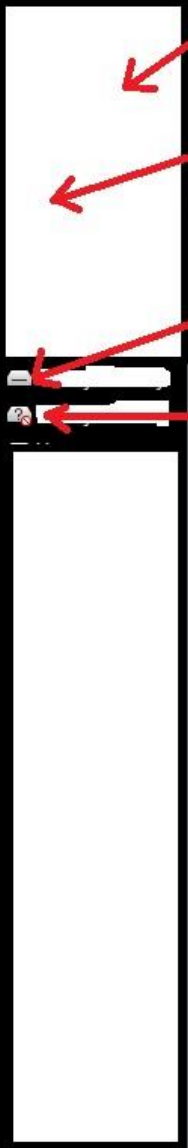

Dependant on how many CCTV systems have they will be listed here

If double left click on the CCTV name here then the images will appear in the black boxes

This means a CCTV system is Online

This means the CCTV system is not online

- Close Video
- Close All Videos**
- Start Audio
- Start Talk
- Start Record
- Snapshot
- Triple Snapshot
- Start Instant Playback
- Playback
- Window Scale
- Stream Type
- Adjust
- IVS Rule
- Full Screen

Once finished viewing the Live CCTV right click on any part of the screen and this box will appear.

 
Select "Close all Video" and you will then be disconnected from the CCTV system.

You may then access another system or close the program

Dependant on how many cameras have connected to the CCTV system you can select the layout here

View

PTZ





Device Local

Device

Input Search Criteria



Playback instructions

Click on the selected CCTV system and tick box next to its name



Start Time

2018 Jan

S	M	T	W	T	F	S
	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31			

00:00:00

End Time

2018 Feb

S	M	T	W	T	F	S
				1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28			

23:59:59

OK

1: Click on the selected start date. Enter Start time.

 
2: Click on selected end date. Enter End time.

3: Click on "OK"

4: Click on search and go to next instructions

2018-02-02 00:00:00
2018-02-02 23:59:59

Click on the date here and calendar will appear



Search



Device Local

Device

Input Search Criteria

- CAM 1
- CAM 2
- CAM 3
- CAM 4
- CAM 5
- CAM 6
- CAM 7
- CAM 8
- CAM 9
- CAM 10
- CAM 11
- CAM 12
- CAM 13
- CAM 14
- CAM 15
- CAM 16

View

Record Picture

Record Type:
All

Stream Type:
Main Stream

Time:
2018-02-02 08:00:00
2018-02-02 08:59:59

Search

Device Local

Device

Input Search Criteria

CAM 1

CAM 2

CAM 3

CAM 4

CAM 5

CAM 6

CAM 7

CAM 8

CAM 9

CAM 10

CAM 11

CAM 12

CAM 13

CAM 14

CAM 15

CAM 16

Evidence removal to your computer/laptop

If only want to download one camera then only have that camera ticked in the boxes

Export Setup

Path: CCTV

Export Format: Original Format

Export SmartPlayer Player!

Free Space: 295496MB

To download CCTV footage click on the start time.

Now click on the scissor icon.

Now click on the scissor icon again.

The box above will appear.

Click on "browse to select a folder on you PC to save images to."

Select the "original format and tick player box".

Click "OK" and download will begin for one hour footage.

View

Record Picture

Record Type:

All

Stream Type:

Main Stream

Time:

2018-02-02 08:00:00

2018-02-02 08:59:59

08:05 08:10 Start: 2018-02-02 08:20:18 End: 2018-02-02 09:20:18 Duration: 00:58:47 08:25 08:30 08:35 08:40 08:45 08:50 08:55 09:00

Search

